

Basic

Before you start cooking with your Thermomix, there are some basic guidelines you should keep in mind. In this Thermomix “1x1” you can learn more about how the Thermomix should be placed, what you need to know about the green sealing ring and much more.

With the Thermomix 1x1 it doesn't take much time to become a Thermomix expert.



HANDLE WITH CARE: Take care when cooking with the Thermomix® and make sure that novice users are supervised or instructed in the use of Thermomix®. Always take care and keep children away when using the Thermomix®.



USE GREEN SEALING RING: Only use your Thermomix® TM31 with the green sealing ring, properly fitted in the lid of the mixing bowl. If you don't have a green sealing ring, please contact the customer service team at Vorwerk UK to order one.



REMEMBER TO REPLACE: The sealing ring (TM31 only) should be replaced every two years or in the case of damage or leakage. Only use original Vorwerk Thermomix® accessories. The use of a sealing ring older than 2 years affects the safety functions of the Thermomix®.



FOR FOOD ONLY: Thermomix® is a cooking appliance intended to be only used for food preparation.



KEEP HOUSING DRY: Do not immerse the Thermomix® housing in water. Make sure no water, liquid or solid food enters the housing. Clean housing only with a damp cloth. Disconnect the Thermomix® from the main power supply before cleaning.



CHECK IT OUT: Check your Thermomix® and accessories, such as the connecting cable, the mixing bowl, the lid or the lid sealing ring (TM31 only) for possible damage every time before using. Use only if undamaged and parts fit correctly.



SHARP BLADES: The blades of the mixing knife are very sharp. Only hold the upper part of the mixing knife when removing or re-inserting it. Do not touch the mixing knife when the Thermomix® is in operation.



FIND THE RIGHT POSITION: Place your Thermomix® on a clean, solid, even and non-heatable surface so it cannot slip. Ensure the Thermomix® is placed away from the hob as it may catch fire in the case of being heated.



IT MAY MOVE: Keep your Thermomix® at a sufficient distance from the edge of the surface because occasionally when kneading dough or chopping food, your Thermomix® may move. Please observe the Thermomix® at any time while operating.

Find more information online on
www.thermomix.co.uk/1x1
www.thermomix.ie/1x1